



PREDATOR 9500 Watt SUPER QUIET Inverter Generator User Guide

[Home](#) » [Predator](#) » PREDATOR 9500 Watt SUPER QUIET Inverter Generator User Guide 

PREDATOR 9500 Watt SUPER QUIET Inverter Generator




Contents


- [1 SETUP GUIDE](#)
- [2 BEFORE USING:](#)
- [3 START GUIDE](#)
- [4 SERVICE GUIDE](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

SETUP GUIDE


1. Mix gas and fuel stabilizer according to fuel stabilizer's instructions

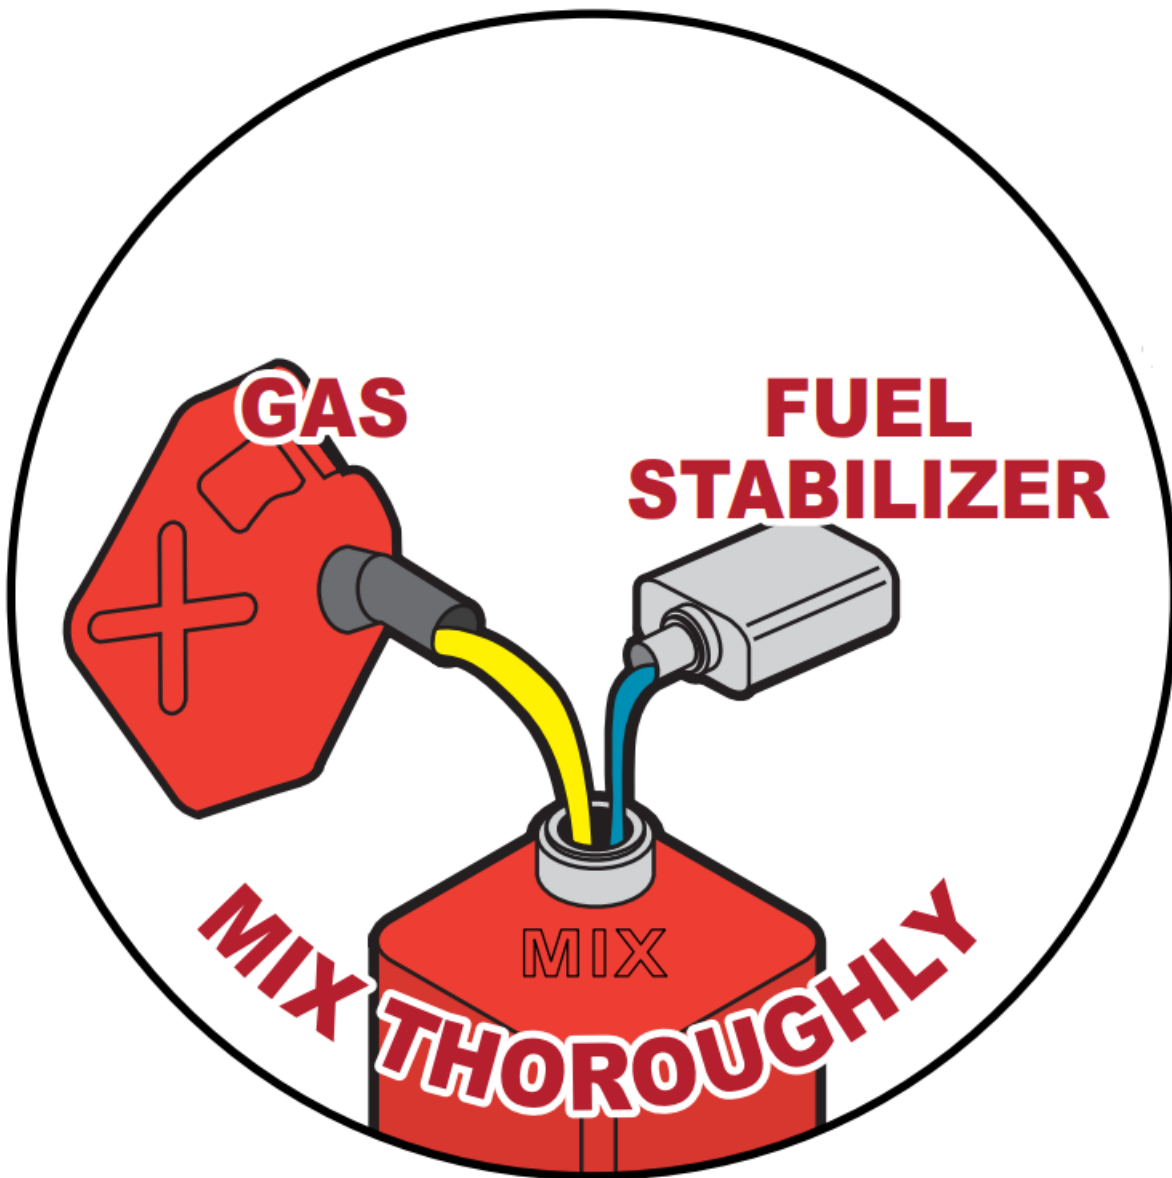


2. Fill gas tank with gas MIX mixture.

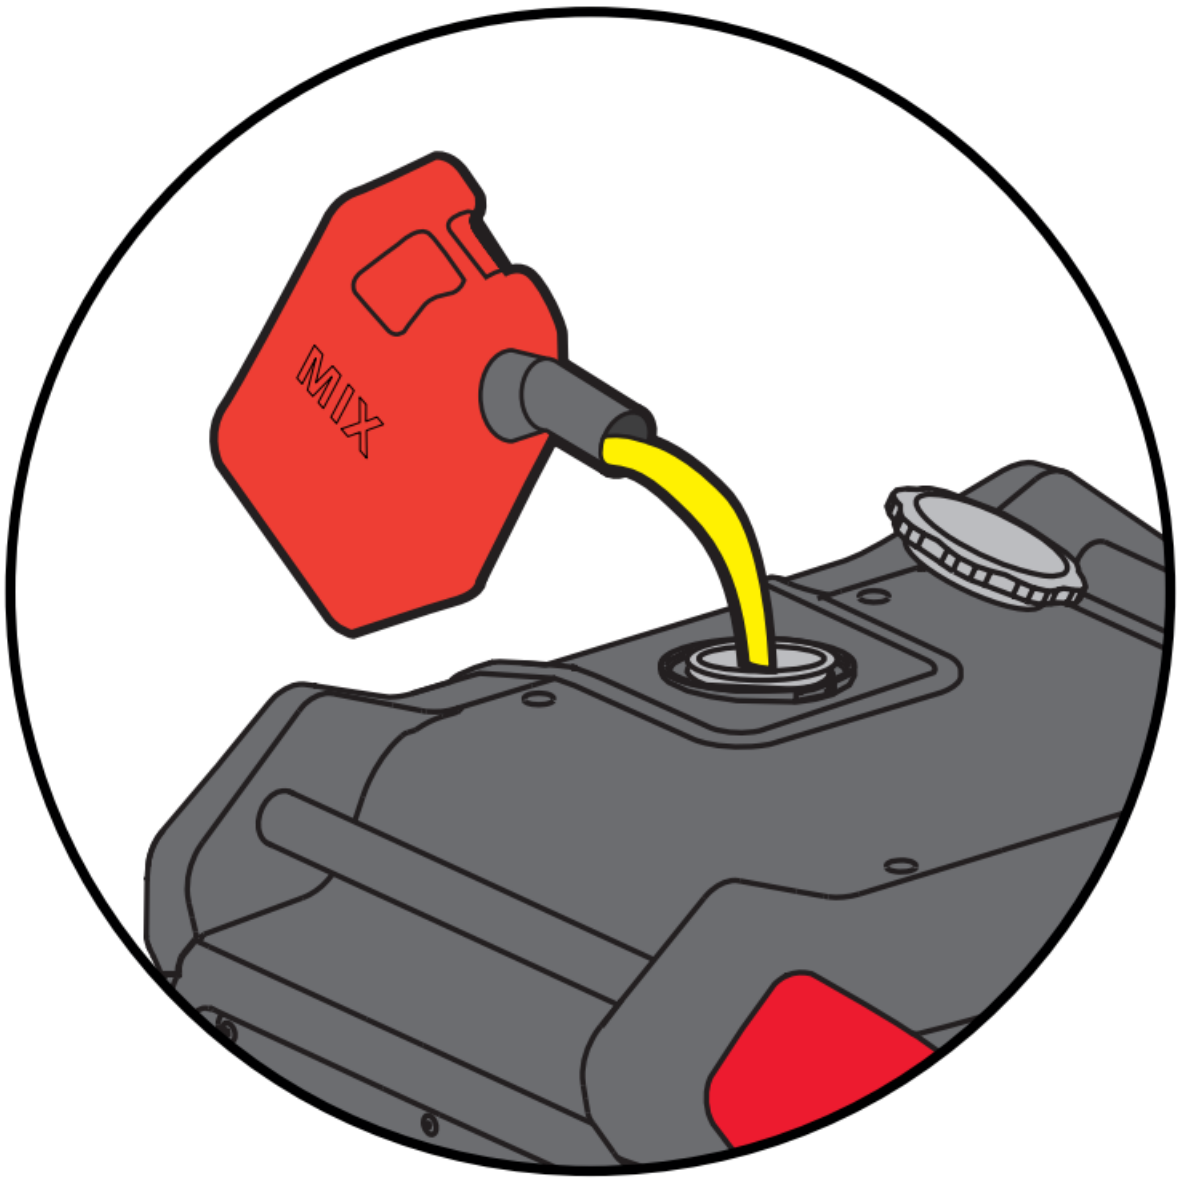


3. Open oil fill access door.

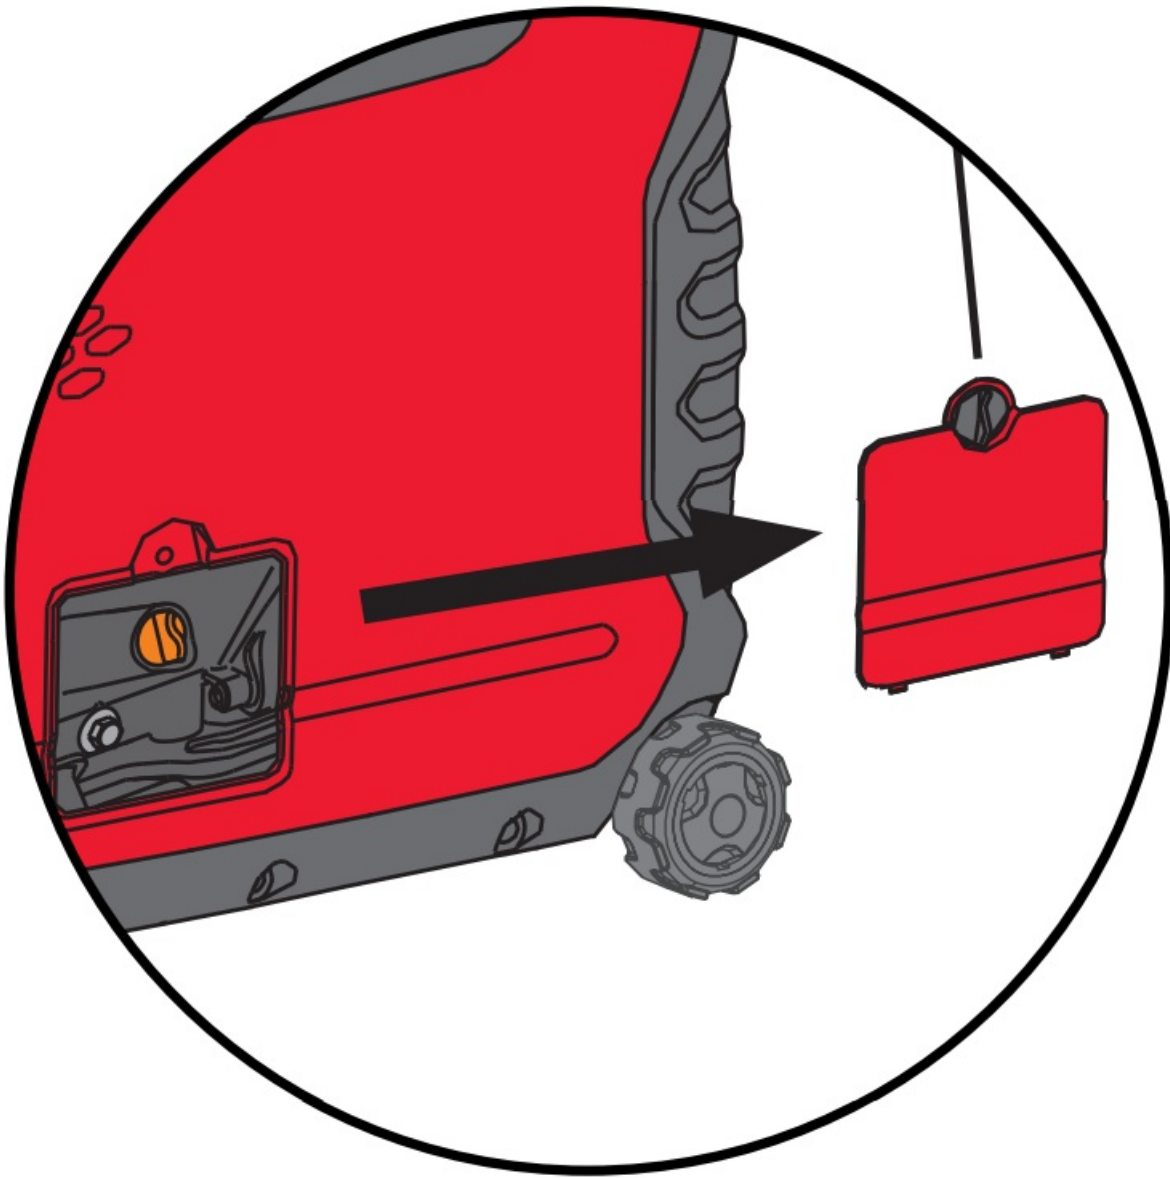

4. Remove oil fill plug.

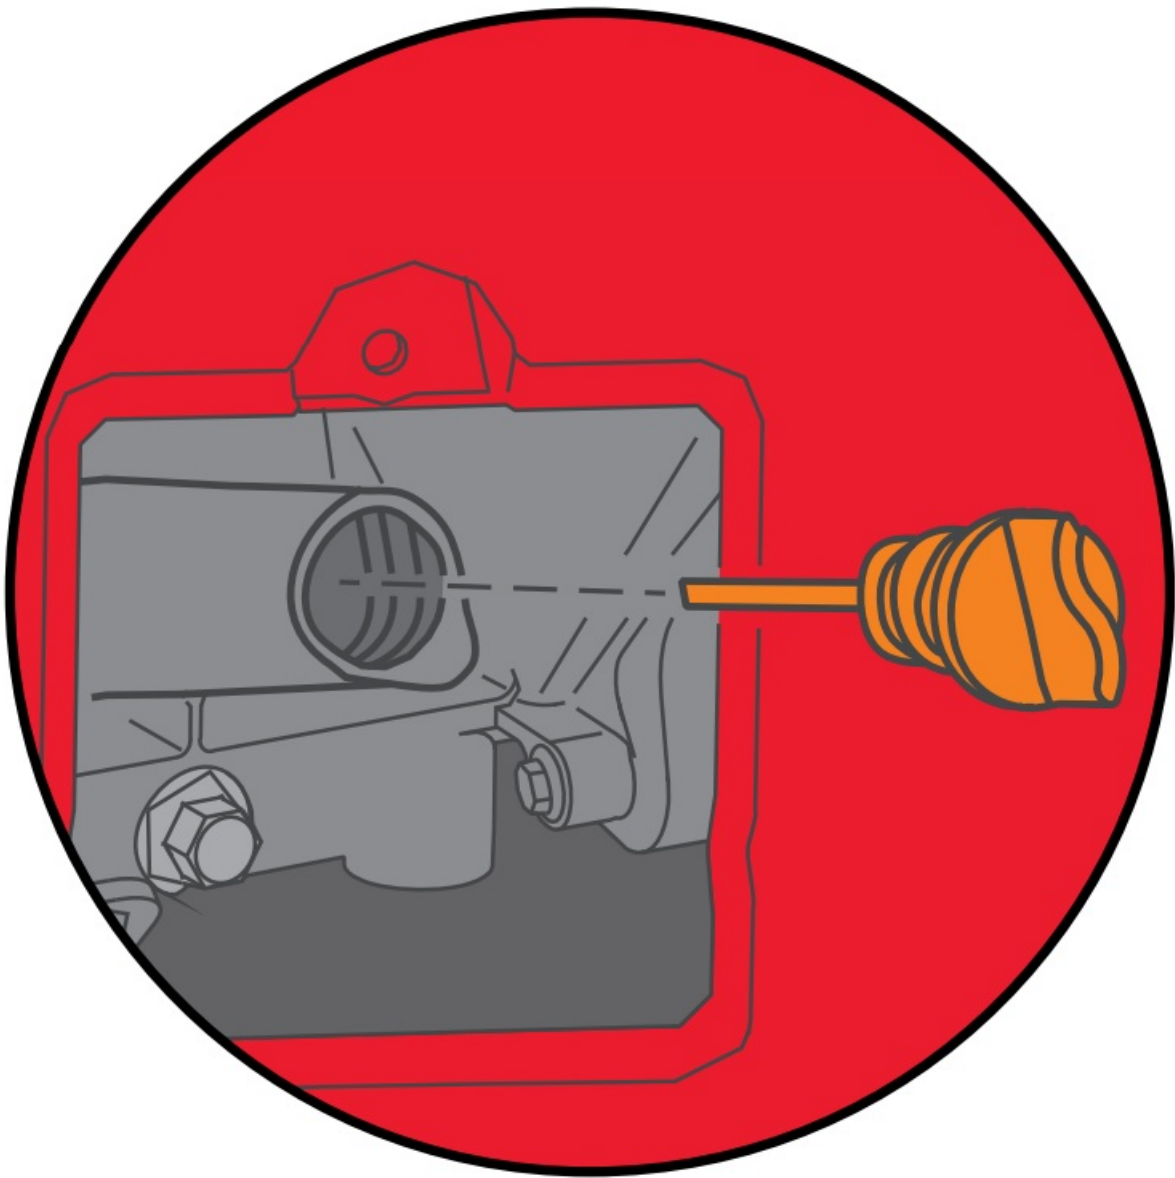

5. Fill to full level on dipstick.

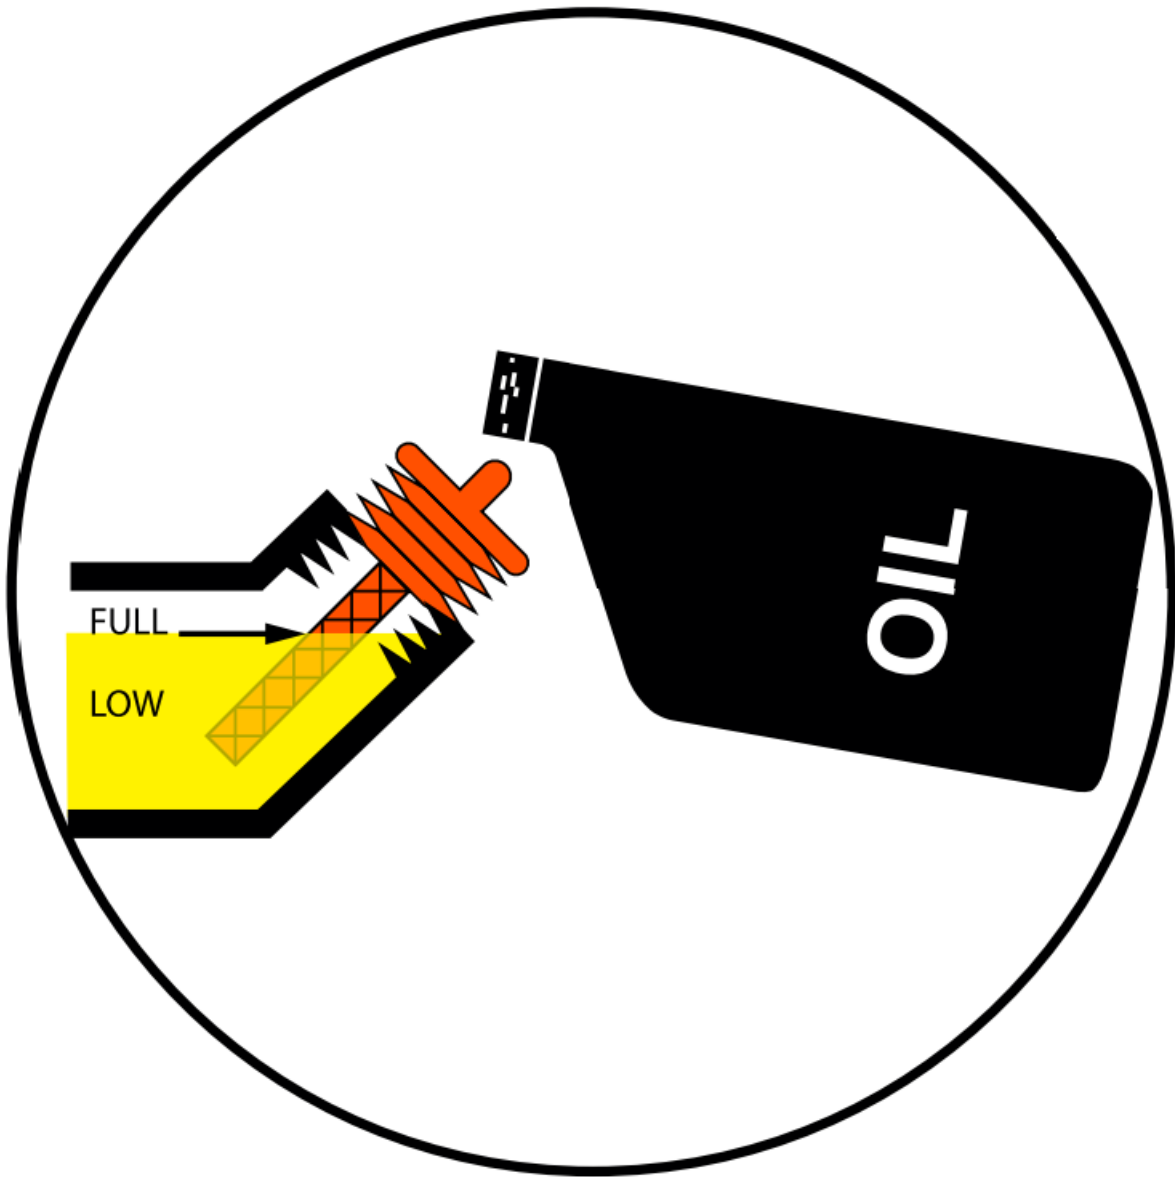


BEFORE USING:

Position generator outside and unplug all electrical loads

DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES.**

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.

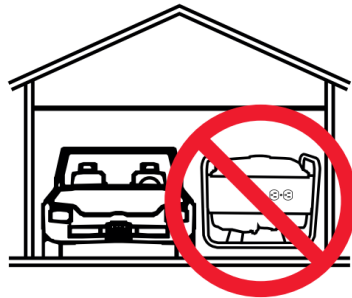

NEVER use inside a home or garage, **EVEN IF** doors and windows are open.






 

Only use **OUTSIDE** and far away from windows, doors, and vents.

DANGER

Do not use in trailers, truck beds, or tents.



Use at least 20 feet away from people, animals, and structures with exhaust pointed away.

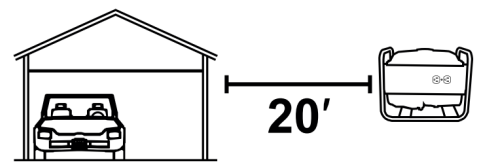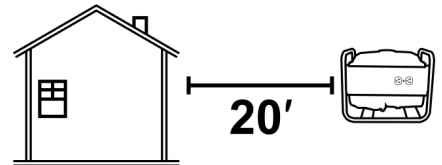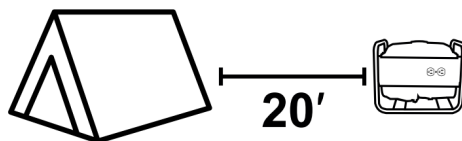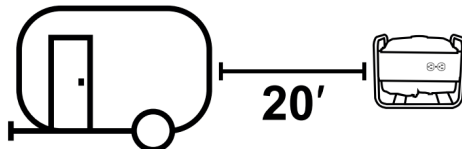


⚠WARNING

To prevent serious injury, read manual before set up and/or use.


START GUIDE

Check oil level and air filter before starting!

1. Turn economy switch (ESC) OFF.

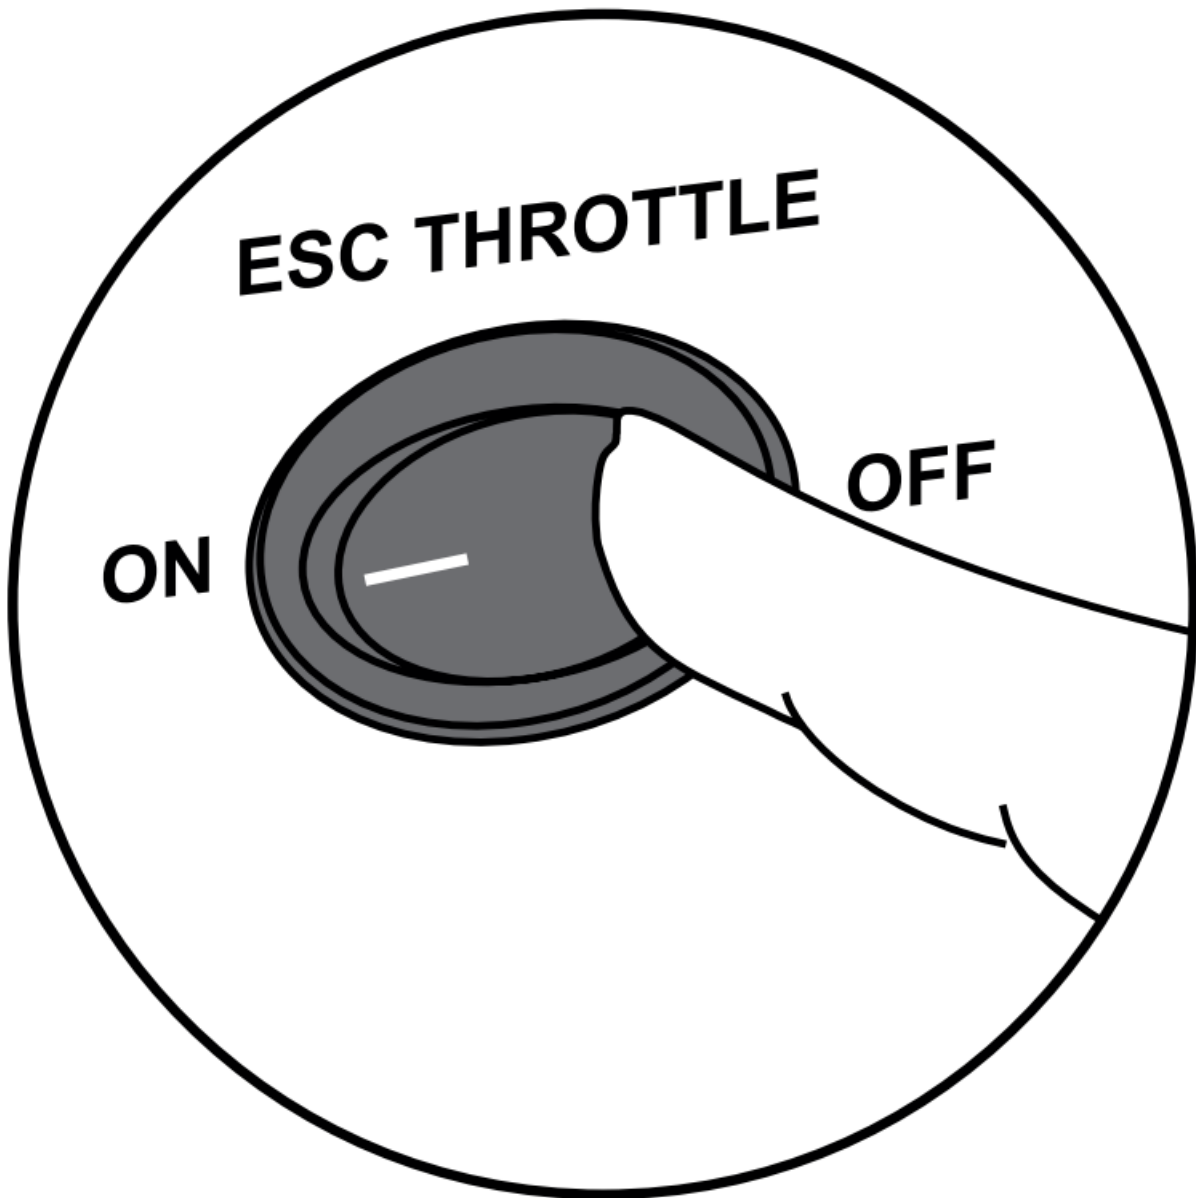


2. Turn switch to START for cold engine. or Turn to RUN for warm engine.

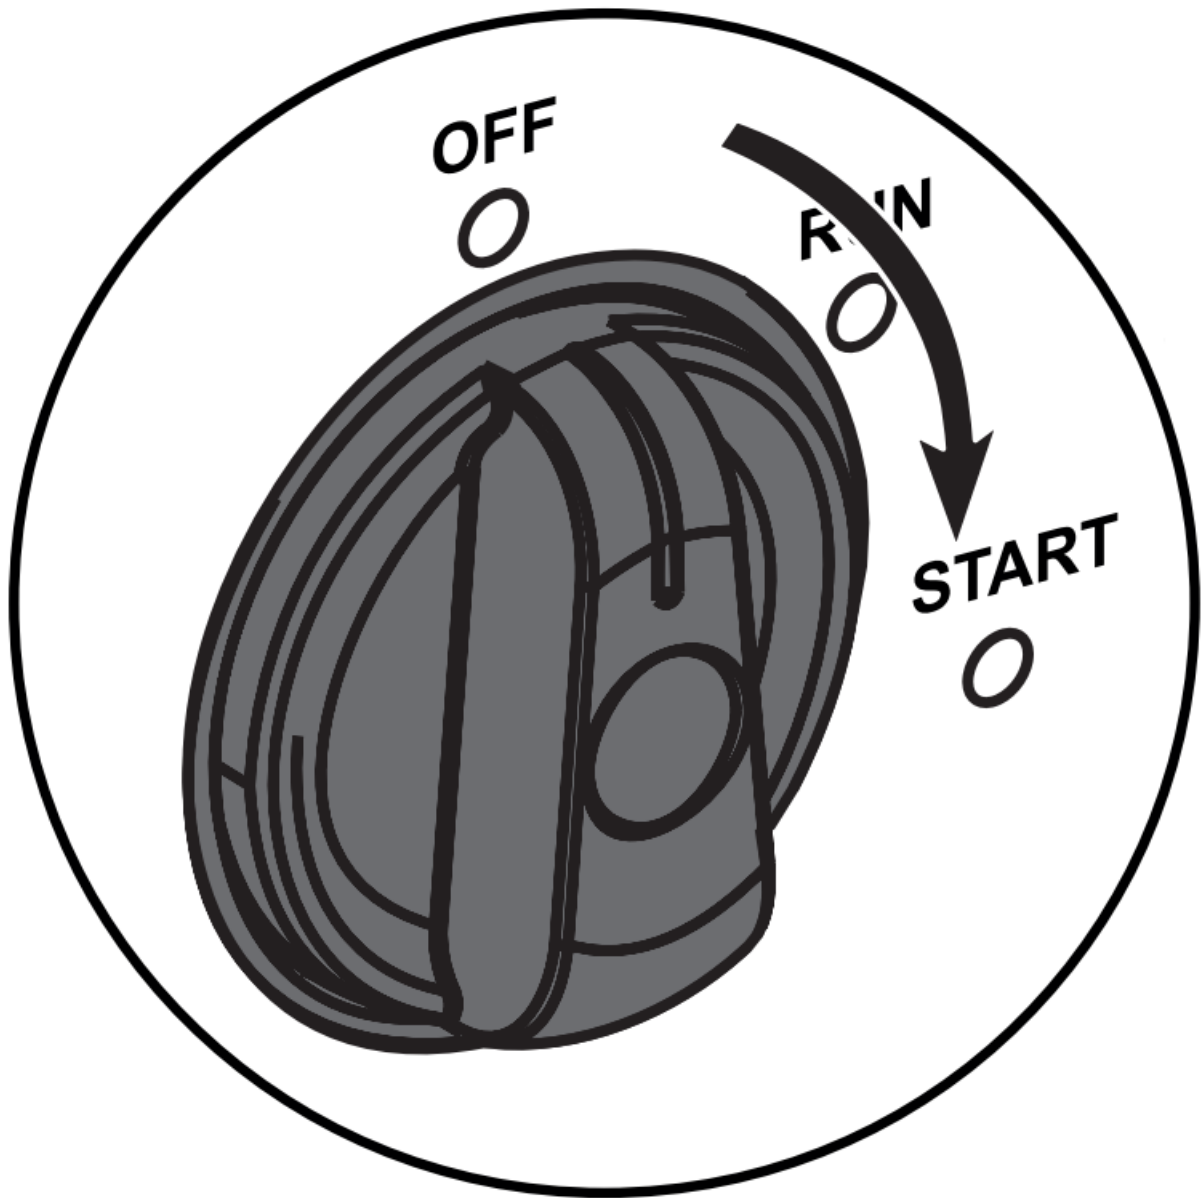


3. Push Start for up to 3 seconds. or Pull starter handle.



4. Wait for OUTPUT light.

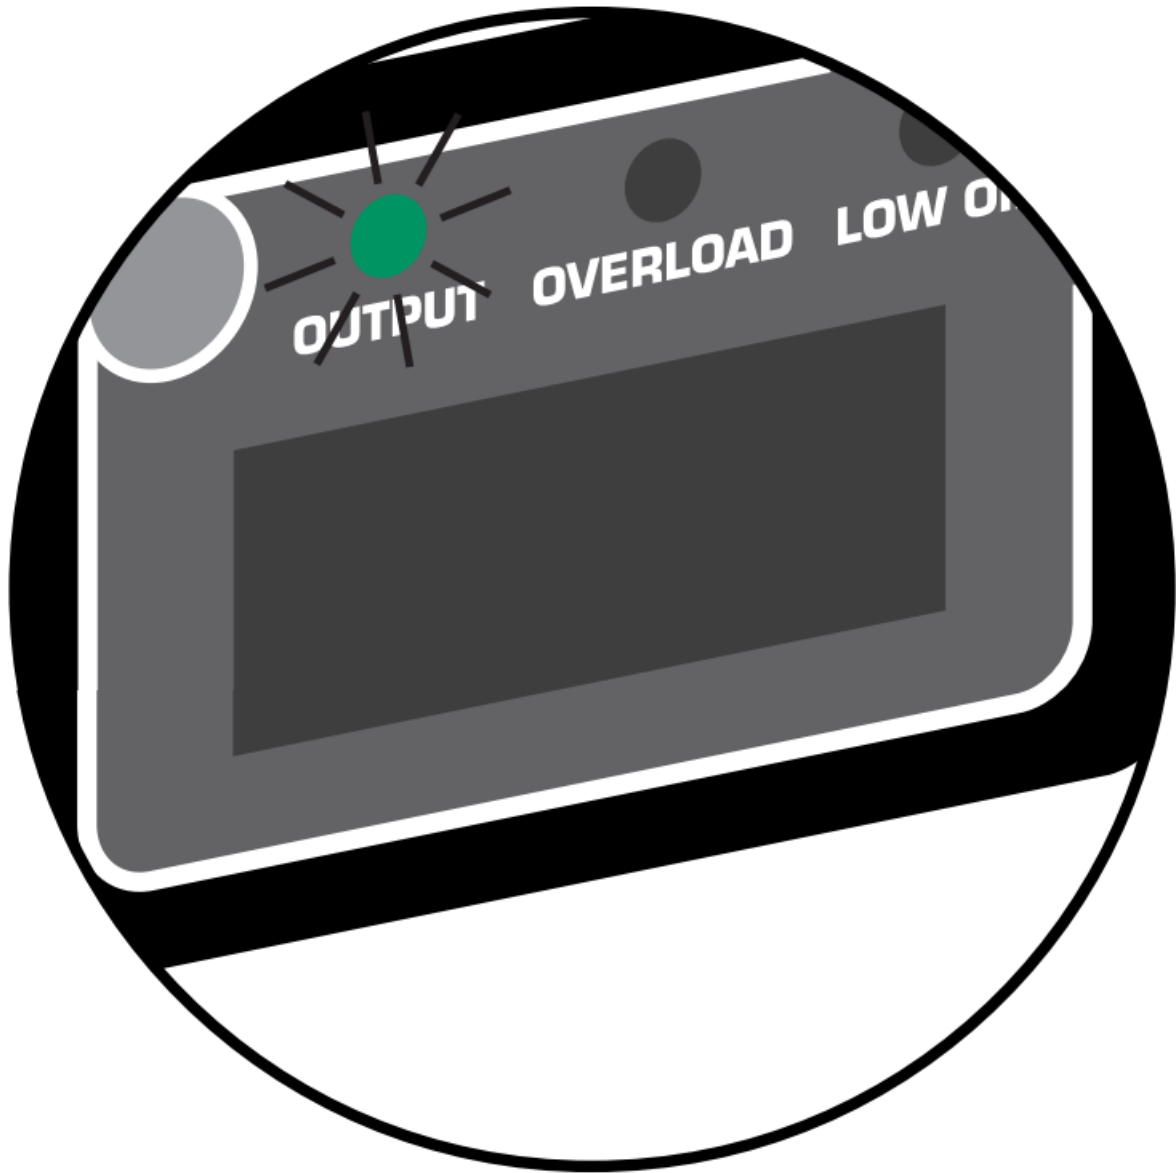


5. Slowly turn switch to RUN before attaching loads.

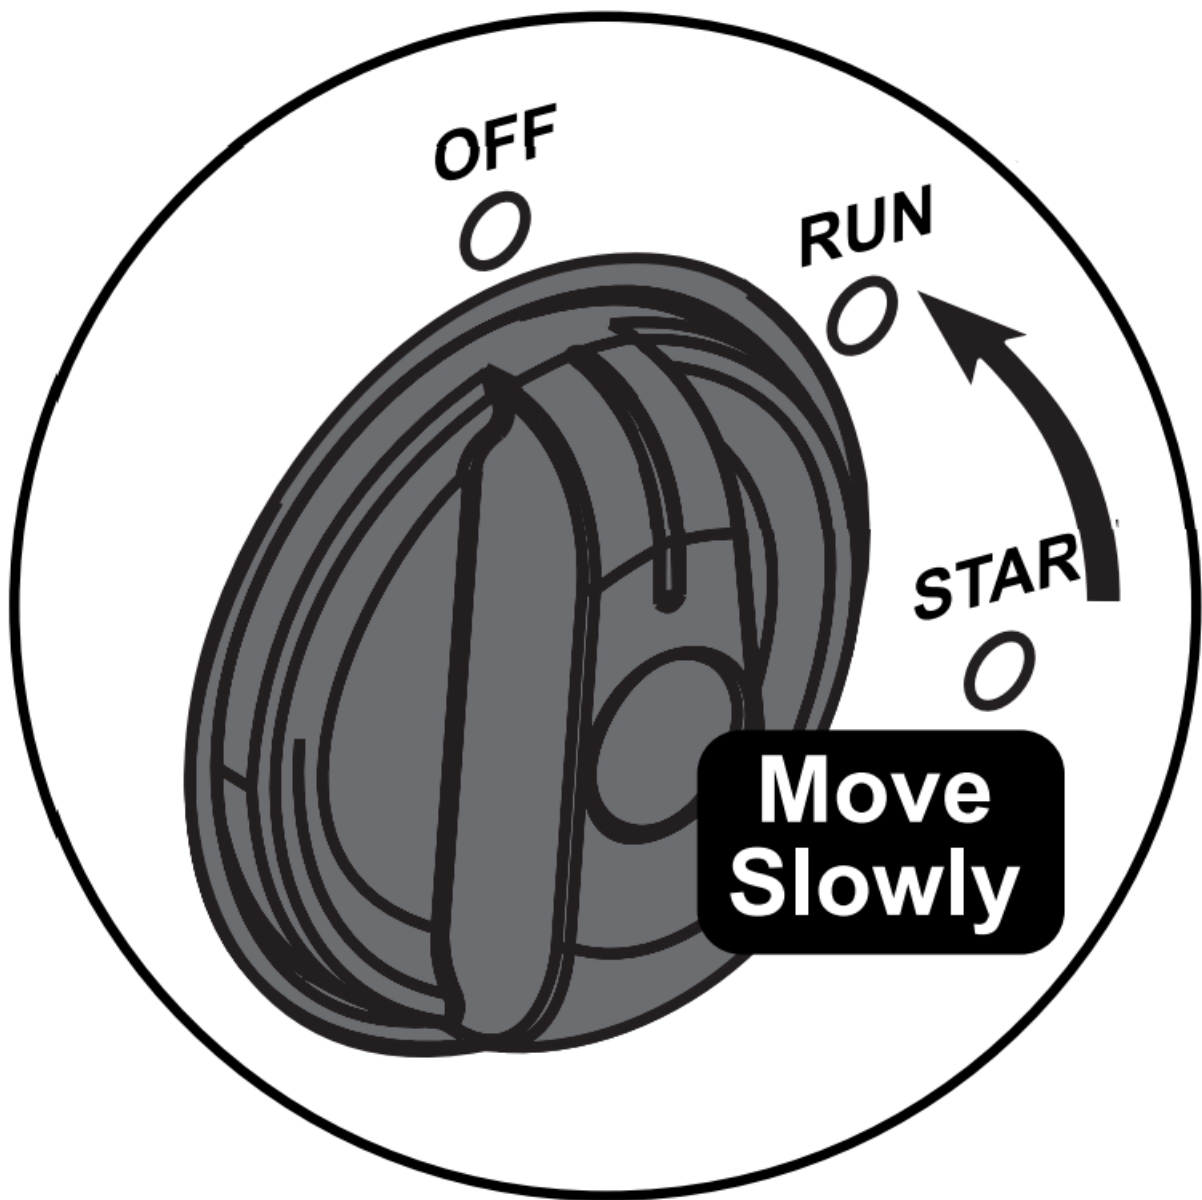


SERVICE GUIDE

1. Open access panel on side.

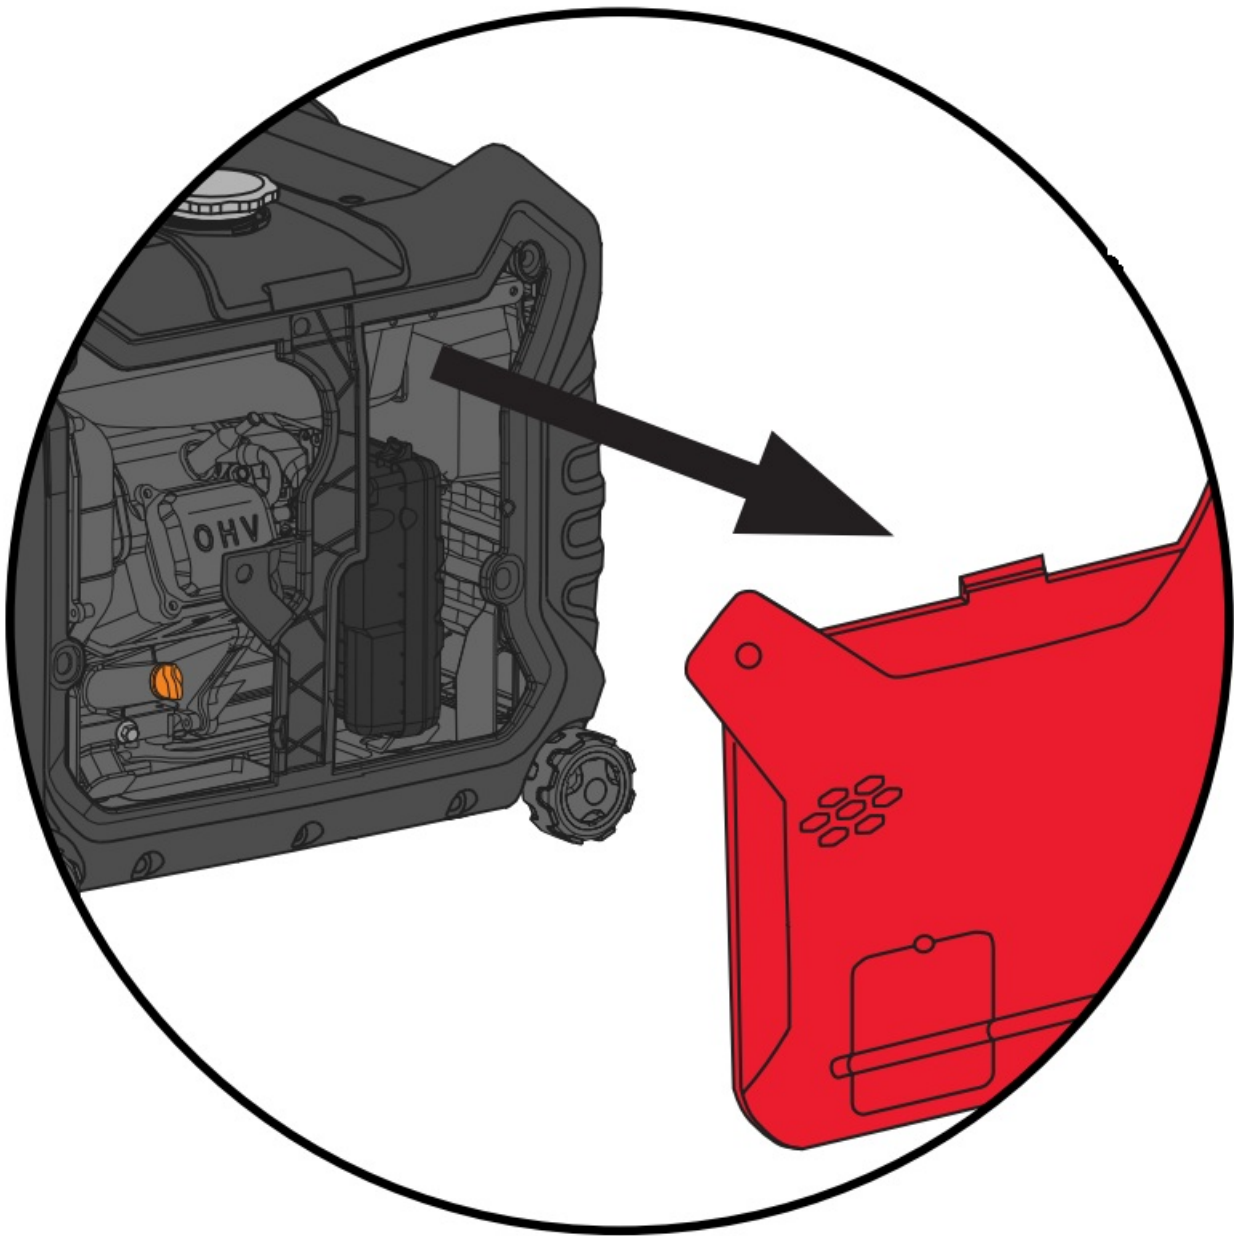


2. Pull the Oil Drain Hose out of the Generator. Remove the Oil Drain Cap. Drain Oil. Replace the Oil Drain Cap. Put the Oil Drain Hose back into the Generator and fill oil.

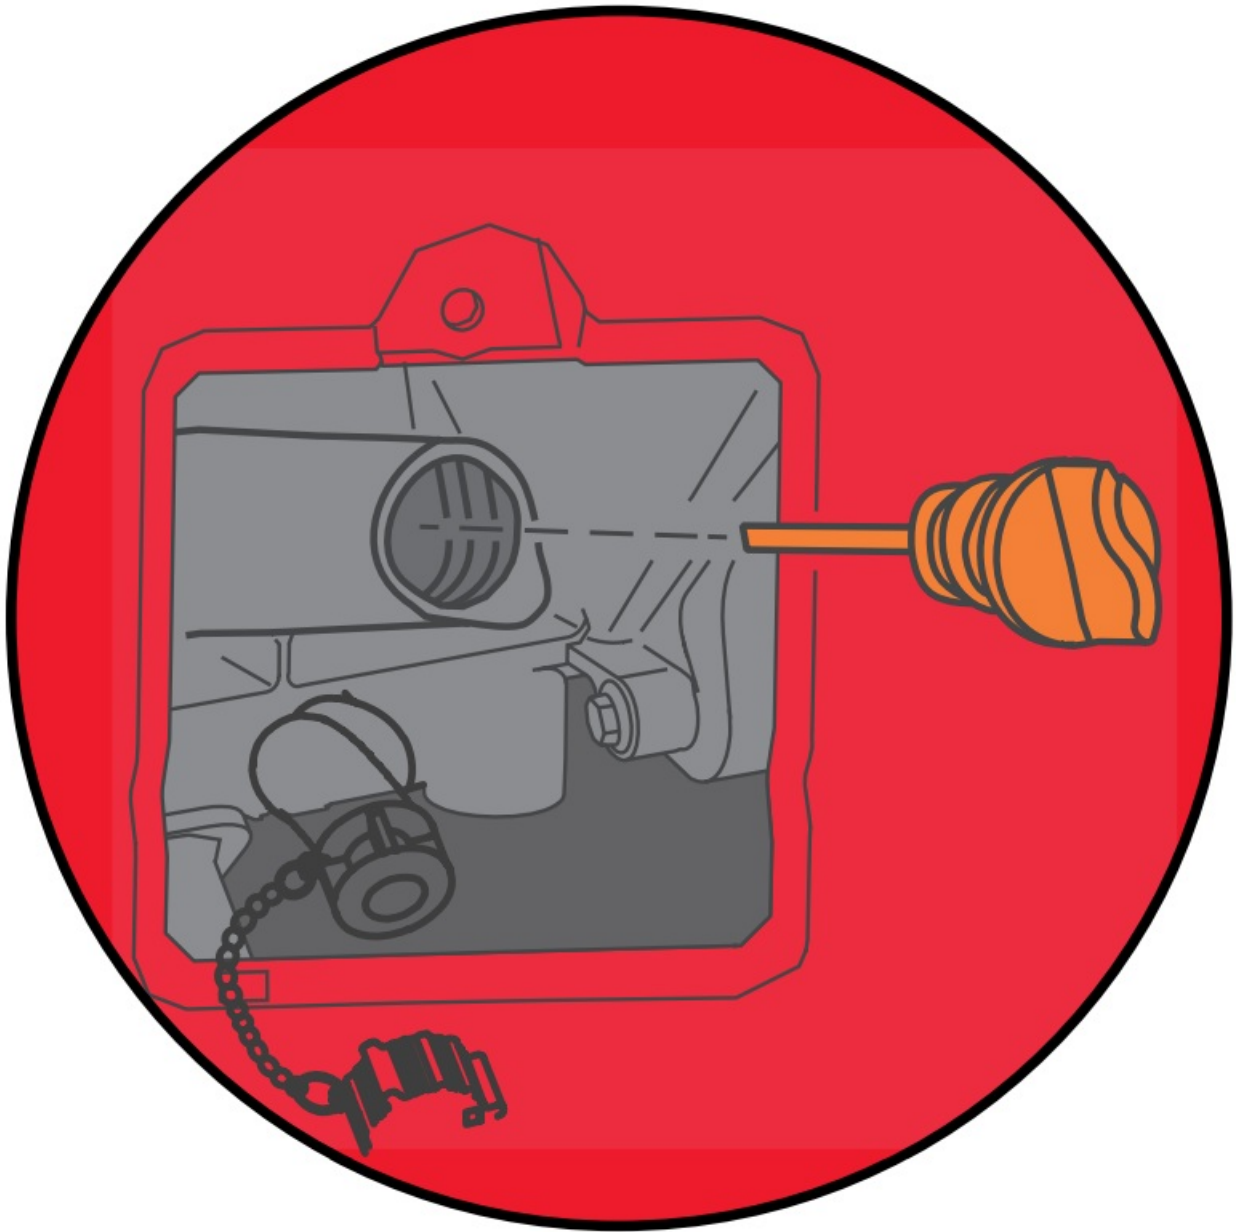

3. Clean/replace air filter.



4. Clean spark arrestor.

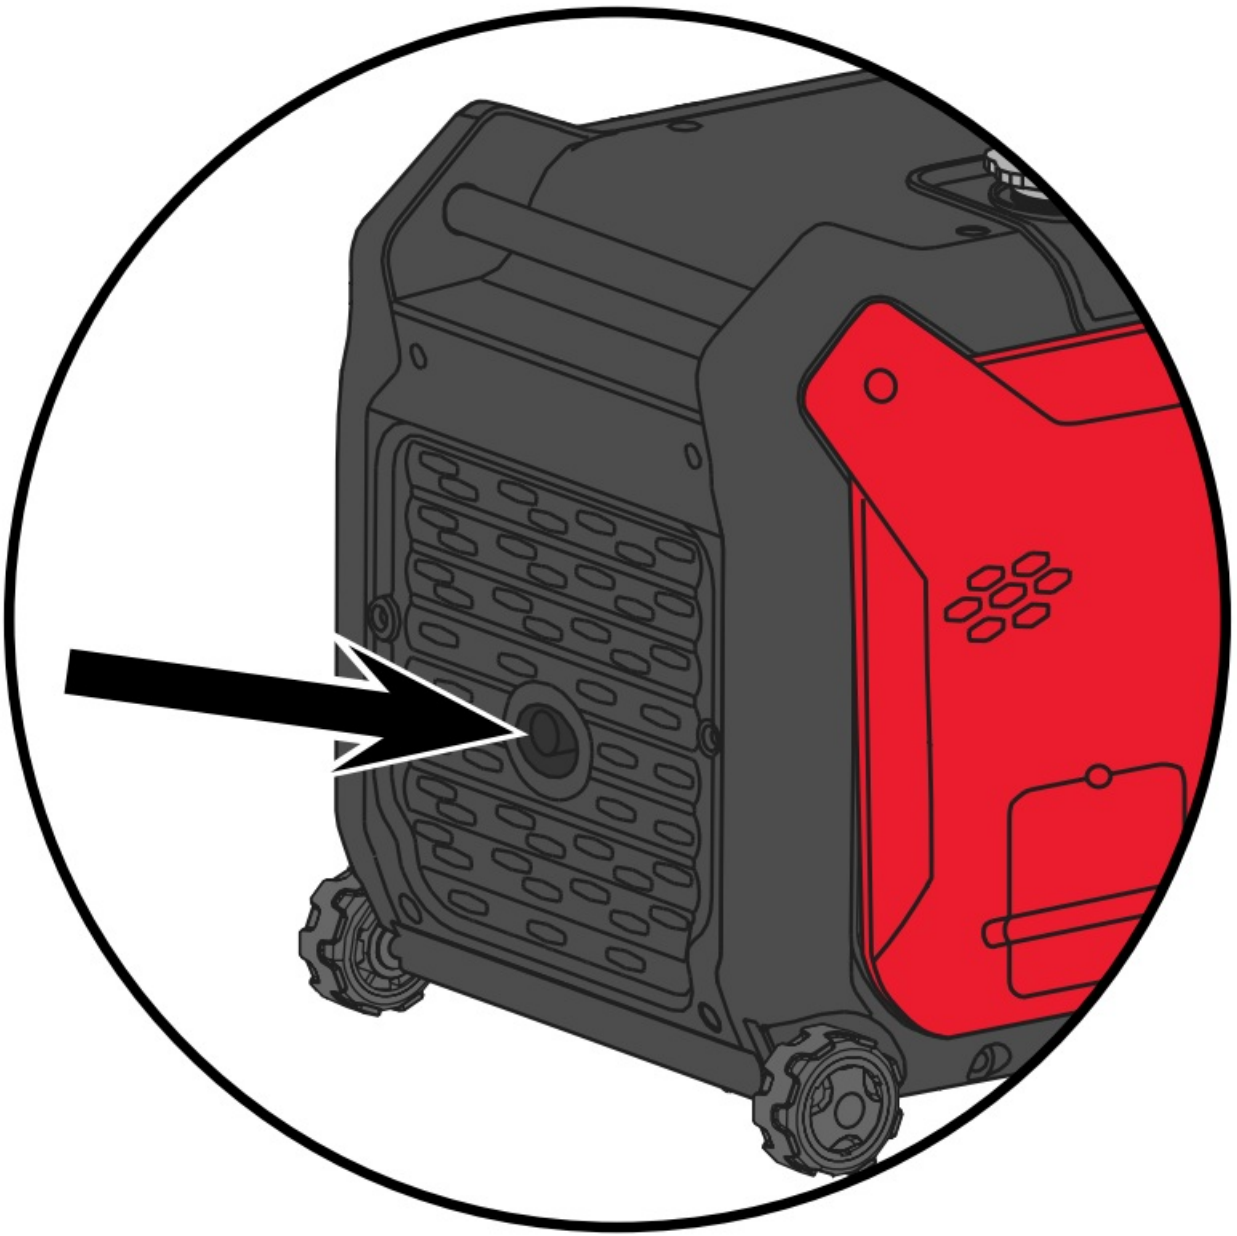


See manual for full maintenance information.

| Maintenance Schedule | FREQUENCY | | |
|---|-------------------|--------------------|---------------------|
| | 3 mo./ 50 h r. | 6 mo./ 100 h r. | yearly/ 300 h r. |
| Clean/replace air filter | ✓ | | |
| 1. Change engine oil 2. Check and clean spark plug 3. Check and clean spark arrestor | | ✓ | |
| 1. Check idle speed and valve clearance 2. Clean fuel tank, strainer, and carb. 3. Clean combustion chamber | | | ✓ |

SAVE THIS GUIDE – DO NOT THROW AWAY!

PREDATOR®

Documents / Resources
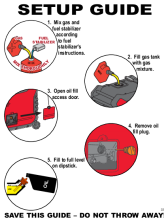
| | |
|--|--|
|  <p>PREDATOR SETUP GUIDE</p> <p>1. Mix gas and two-stroke oil according to the bag or Predator's instructions.</p> <p>2. Fill gas tank with gas mixture.</p> <p>3. Open oil fill.</p> <p>4. Remove oil plug.</p> <p>5. Fill to full level.</p> <p>SAVE THIS GUIDE - DO NOT THROW AWAY!</p> | <p>PREDATOR 9500 Watt SUPER QUIET Inverter Generator [pdf] User Guide 9500 Watt SUPER QUIET Inverter Generator, QUIET Inverter Generator, 9500 Watt SUPER Inverter Generator, Inverter Generator, Generator</p> |
|--|--|